

Installing the Cisco 1005

The Cisco 1005 router is designed for quick and easy installation. This chapter provides hardware installation procedures and includes the following sections:

- Safety Recommendations
- Inspecting Your Router
- Tools and Parts Required
- Setting the Router on a Desktop
- Mounting the Router
- Connecting to the Network and Powering Up the Router
- Checking Your Router Installation

It takes just a few simple steps to install the Cisco 1005 router. But before you install the router, read the safety information in this chapter.

Note Translations of the safety warnings in this document are available in the appendix “Translated Safety Warnings.”

Safety Recommendations

Because any device that uses electricity must be handled carefully, follow these guidelines to ensure general safety:

- Keep the area clear and dust-free during and after installation.
- Keep tools away from walk areas where you and others could trip over them.
- Do not wear loose clothing that could get caught in the chassis. Fasten your tie or scarf and roll up your sleeves.
- Wear safety glasses when working under any conditions that might be hazardous to your eyes.
- Do not perform any action that creates a potential hazard to people or makes the equipment unsafe.



Warning Before working on equipment that is connected to power lines, remove jewelry (including rings, necklaces, and watches). Metal objects will heat up when connected to power and ground and can cause serious burns or weld the metal object to the terminals. (To see translated versions of this warning, see the appendix “Translated Safety Warnings”.)

- Locate the emergency power-off switch for the room in which you are working. Then, if an electrical accident occurs, you can act quickly to shut off the power.
- Before working on the system, unplug the power cord.
- Disconnect all power before doing the following:
 - Installing or removing the router
 - Working near power supplies
- Do not work alone when potentially hazardous conditions exist.
- Never assume that power has been disconnected from a circuit. Always check.
- Look carefully for possible hazards in your work area, such as moist floors, ungrounded power extension cables, and missing safety grounds.



Warning Ultimate disposal of this product should be handled according to all national laws and regulations. (To see translated versions of this warning, see the appendix “Translated Safety Warnings.”)

- If an electrical accident occurs, proceed as follows:
 - Use caution; do not become a victim yourself. Disconnect power to the router.
 - If possible, send another person to get medical aid. Otherwise, assess the condition of the victim and then call for help.
 - Determine if the person needs rescue breathing or external cardiac compressions; then take appropriate action.



Warning This product relies on the building’s installation for short-circuit (overcurrent) protection. Ensure that a fuse or circuit breaker no larger than 120 VAC, 15A U.S. (240 VAC, 10A international) is used on the phase conductors (all current-carrying conductors). (To see translated versions of this warning, see the appendix “Translated Safety Warnings.”)



Warning When installing the main wiring, the ground connection must always be made first and disconnected last. (To see translated versions of this warning, see the appendix “Translated Safety Warnings.”)

Inspecting Your Router

Keep the router in the shipping container to prevent accidental damage until you have determined where you want to install it; then unpack it. Check the packing list to ensure that you received the following items:

- Cisco 1005 router
- Console cable (RJ-45 to RJ-45) with an RJ-45-to-DB-25 adapter

Tools and Parts Required

- External power supply with power cord

Note The power cord has the appropriate plug for the country to which the router ships.

- Label printed with the serial number and Media Access Control (MAC) address, which is attached to the outside of the shipping container
- The warranty package, which includes the Product Registration form, service and support information, and the *Ordering Cisco Documentation* publication.

Depending on the options you selected, your order might also include the following items:

- Optional PCMCIA Flash memory card
- Optional network connection cables
- Optional companion publications

Inspect all items for shipping damage. If anything appears to be damaged, contact your system administrator or customer service representative.

Tools and Parts Required

Following are the tools and parts required to install the router:

- 3/16-inch (0.476 cm) flat-blade or socket screwdriver
- Wall-mount hardware, including screws, that you provide
- Console terminal (a console cable is provided)
- One interface cable (not provided) for the LAN port (10BaseT Ethernet)

- One shielded interface cable (not provided) for the WAN port (DB-60 serial)
- Channel service unit/digital service unit (CSU/DSU) or modem (synchronous or asynchronous) (not provided) for access to a WAN

Note To ensure agency compliance, use a shielded serial transition cable with your Cisco 1005 router when connecting to a CSU/DSU or modem.

The router can be placed on any flat surface or installed in any orientation, such as upside down or on a vertical surface. It is designed to allow trouble-free operation without cooling fans, special equipment closets, or racks.

To prevent the cables from disconnecting from the chassis, install your router in a manner that minimizes strain on the cables.

Setting the Router on a Desktop

To set the router on a desktop, shelf, or other flat, secure surface, perform the following steps:

- Step 1** Confirm that the plastic “feet” on the bottom of the router are turned so that they are completely under the unit.
- Step 2** Set the router on the surface on which you are going to install it, but place it so that you have access to the rear panel. This orientation will allow you to install the cables in the connectors on the rear panel.




Caution If you place the router on a desk or table, do not place anything on top of it that could restrict airflow around the router or weighs in excess of 10 pounds (4.5 kg). Excessive weight on top of the router could cause damage.

Mounting the Router

To mount the router on a wall or other flat surface (such as a desk or table), perform the following steps:

- Step 1** Turn out the plastic feet on the bottom of the router to 90 degrees so that the holes in the feet are exposed. (See Figure 2-1.)

Figure 2-1 Preparing to Mount the Router

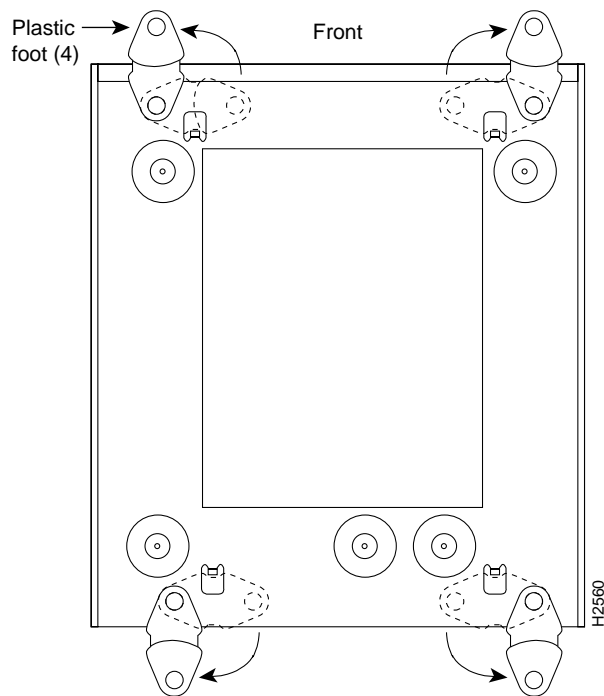


Step 2 Using wall-mount hardware, including screws, that you must provide, attach the router to a wall or other flat surface. (See Figure 2-2.) Mount the router so that the following conditions are met:

- The front-panel LEDs face upward and are easily visible. Later, you will use the LEDs to verify that the router is working properly. Mounting the router with the LEDs facing upward will also reduce strain on the cable connections.
- The power supply does not hang from its cable. The power supply will disconnect from its cable if it is not supported.



Caution We recommend that you align the plastic feet with a vertical wall stud. If the screws are not properly anchored in wallboard, drywall, or a vertical stud, cable strain could pull the chassis from the wall.

Figure 2-2 Wall-Mounting the Router

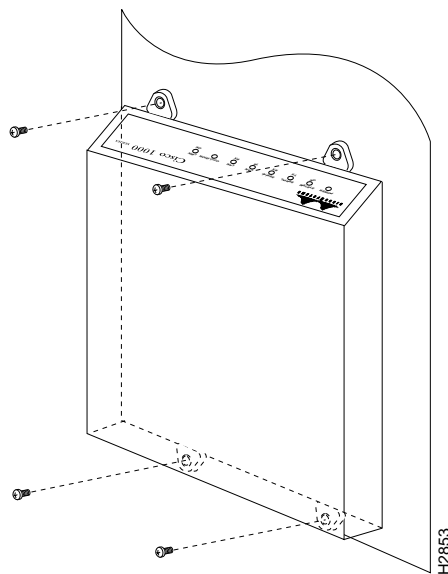

Connecting to the Network and Powering Up the Router


After installing the router, install the Flash memory card (optional), connect the interface cables, and then connect the power supply. All the connectors are on the rear panel of the router. (See Figure 2-3.) The connectors, from left to right, are as follows:

- 10BaseT port (RJ-45)
- Console port (EIA/TIA-232) (RJ-45)

Note EIA/TIA-232 and EIA/TIA-449 were known as recommended standards RS-232 and RS-449 before their acceptance as standards by the Electronic Industries Association (EIA) and Telecommunications Industry Association (TIA).

- Serial port (DB-60)
- PCMCIA slot (Flash memory card)
- DC power input port (12 VDC)

Figure 2-3 Rear Panel

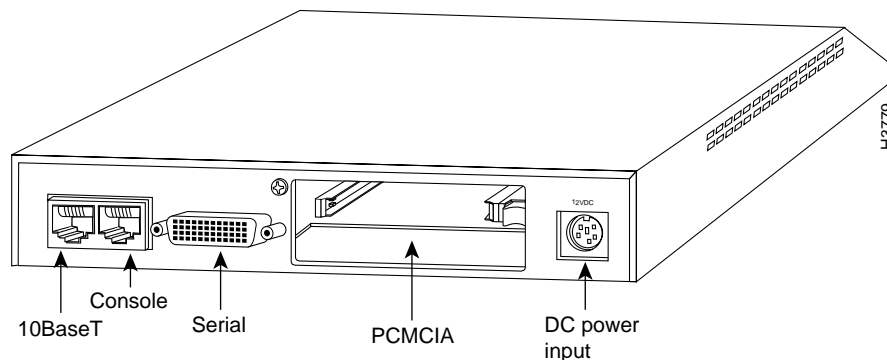


Installing the Flash Memory Card

This section explains how to install an optional PCMCIA Flash memory card. If you did not order a Flash memory card, skip this section and proceed to the next section, “Connecting the Network Interface Cables.”

To install the optional Flash memory (PCMCIA) card, perform the following steps:

- Step 1** While pressing down on the two tabs at the top of the PCMCIA door, rotate the top of the door away from the rear panel, lift it off, and place it aside. (See Figure 2-4.)


Figure 2-4 Removing the PCMCIA Door

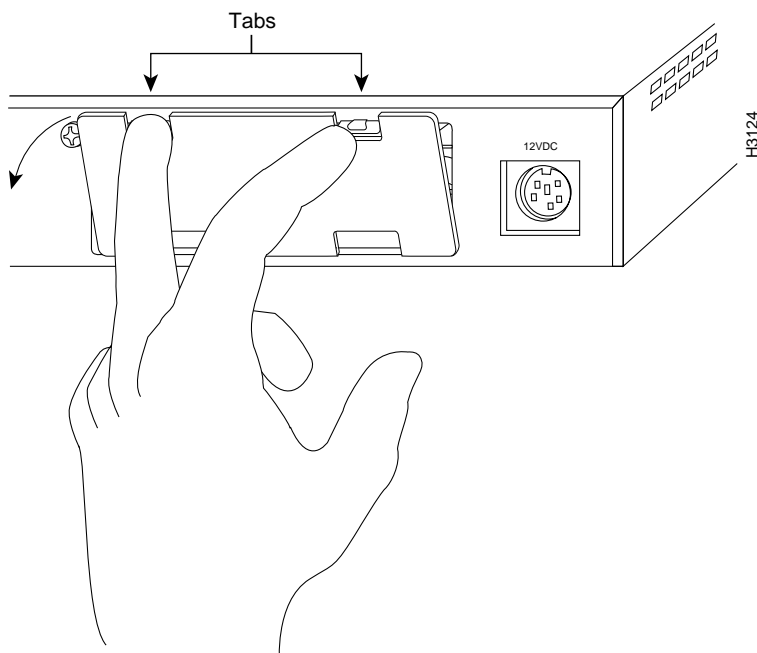

Connecting to the Network and Powering Up the Router


Step 2 If you want to be able to download new software over the WAN, verify that the Flash memory card is set with write protection OFF. The write-protect switch is located at the top right edge of the card. (See Figure 2-5.) When write protection is OFF, the write-protect switch is in the left position, as shown in Figure 2-5.

Figure 2-5 **Setting the Write-Protect Switch**

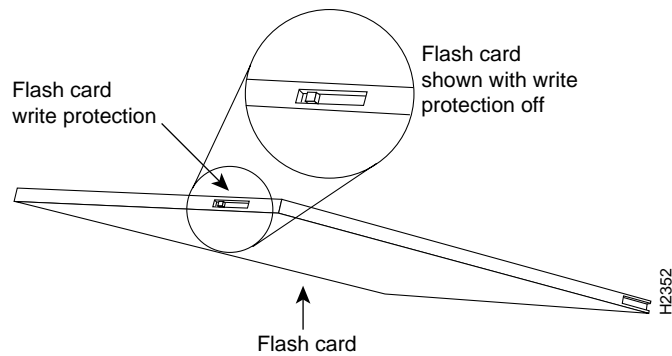

Step 3 Push the Flash memory card into the PCMCIA slot on the rear panel until the Flash memory card is seated completely in the connector (inside the router). (See Figure 2-6.)

Figure 2-6 Installing a Flash Memory Card

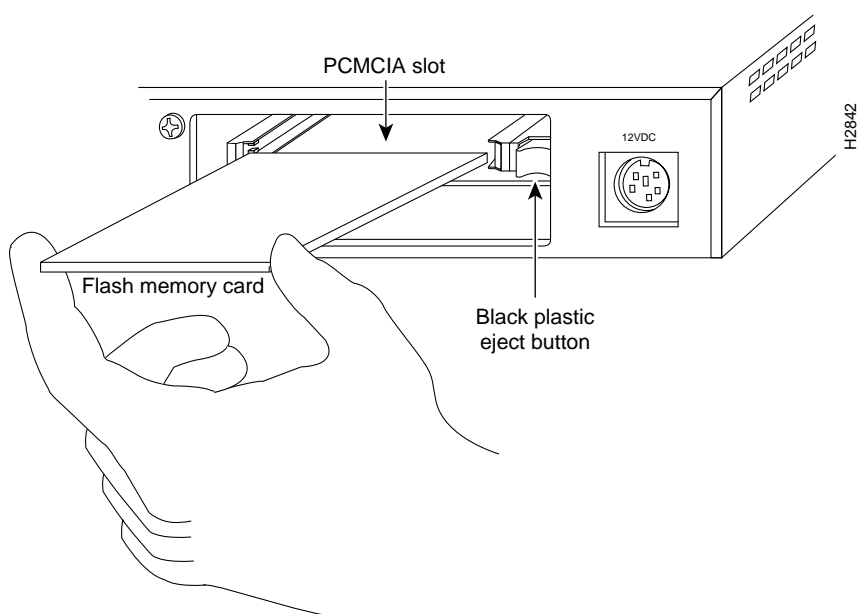


Connecting to the Network and Powering Up the Router

Step 4 Align the bottom of the PCMCIA door with the bottom of the PCMCIA slot. (See Figure 2-7.) Then push the top of the door toward the rear panel until the plastic tabs snap into place. Replacing the door prevents dust from entering the chassis.

Note If you cannot close the door completely, the Flash memory card might not be seated completely in the connector (inside the router). Press the black plastic eject button at the right side of the slot (see Figure 2-6) to remove the Flash memory card. Then reinsert the card and replace the door.

Figure 2-7 Replacing the PCMCIA Door

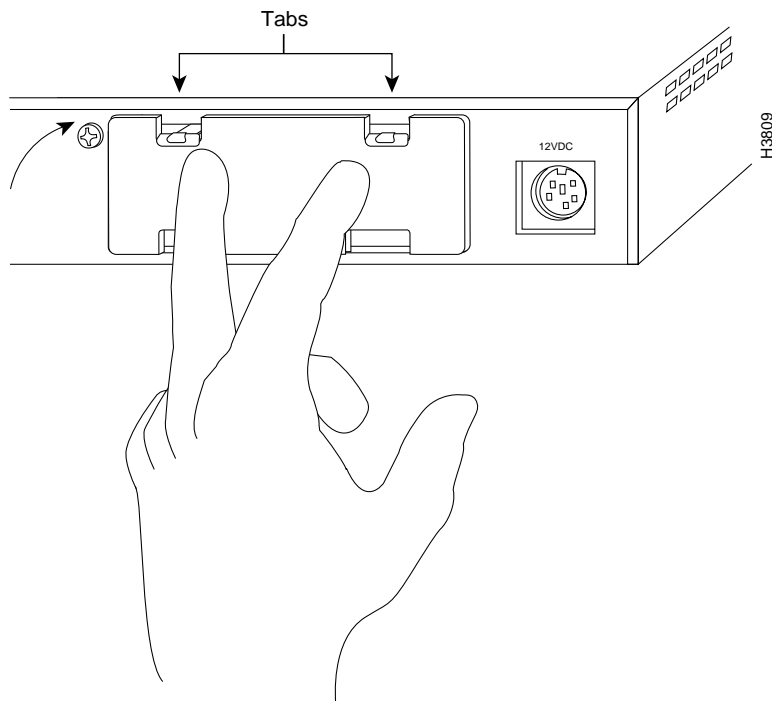

Connecting the Network Interface Cables

The 10BaseT Ethernet port supports unshielded twisted-pair cabling. You must supply the cable that connects to the 10BaseT Ethernet port. To connect your Cisco 1005 router to a hub, you need a straight-through cable (see Table A-2 in the appendix “Cable Pinouts”). To connect to a PC Ethernet network interface card, you need a crossover cable (see Table A-3 in the appendix “Cable Pinouts”).

For synchronous communication, the serial port supports the following standard interfaces: EIA/TIA-232, EIA/TIA-449, V.35, X.21, and EIA-530. For asynchronous communication, the serial port supports the EIA/TIA-232 standard interface.

You can order from Cisco Systems a DB-60 shielded serial transition cable. The router end of the shielded serial transition cable has a DB-60 connector; the other end of the cable has the appropriate connector for the standard interface you specify. (For cable pinouts, refer to the appendix “Cable Pinouts.”) To ensure agency compliance with electromagnetic interference (EMI) emissions requirements, use only a shielded serial transition cable with your Cisco 1005 router.



Warning Do not work on the system or connect or disconnect cables during periods of lightning activity. (To see translated versions of this warning, see the appendix “Translated Safety Warnings.”)

Connecting to the Network and Powering Up the Router


To connect the network interface cables to the router, perform the following steps:

- Step 1** Connect an Ethernet cable (not provided) to the 10BaseT port. (See Figure 2-8.) Use a straight-through Ethernet cable if you are connecting the router to a 10BaseT hub. Use a crossover Ethernet cable if you are connecting the router to a PC network interface card.




Warning The ports labeled “10BaseT,” “Console,” and “PCMCIA” are safety extra-low voltage (SELV) circuits. SELV circuits should only be connected to other SELV circuits. (To see translated versions of this warning, see the appendix “Translated Safety Warnings.”)

Figure 2-8 Connecting to the 10BaseT Port

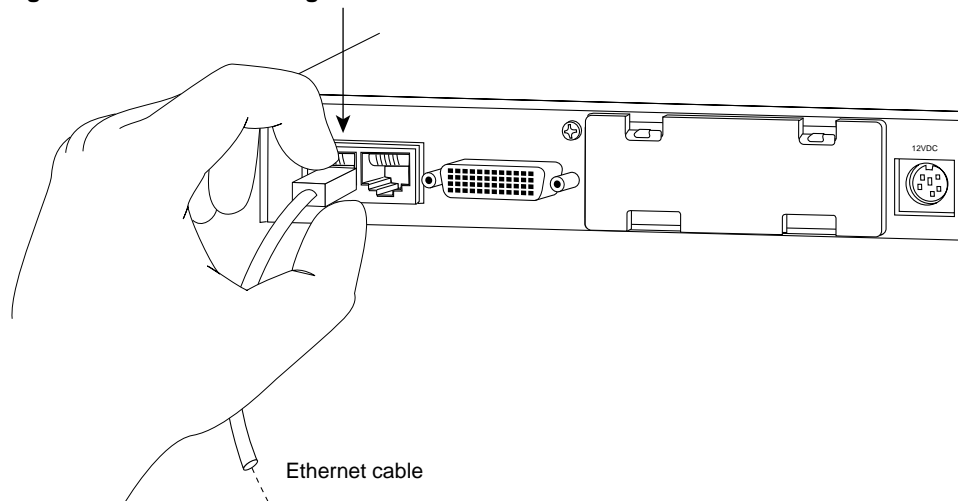


- Step 2** Connect the other end of the Ethernet cable to your Ethernet network. You can connect the Ethernet port in one of two ways:
- Connect a straight-through 10BaseT cable to a 10BaseT hub. (See Figure 2-9.) (For cable pinouts, refer to Table A-2 in the appendix “Cable Pinouts.”)
 - Connect the crossover 10BaseT cable to a PC network interface card. (See Figure 2-10.) (For cable pinouts, refer to Table A-3 in the appendix “Cable Pinouts.”)

Figure 2-9 Connecting to a 10BaseT Hub

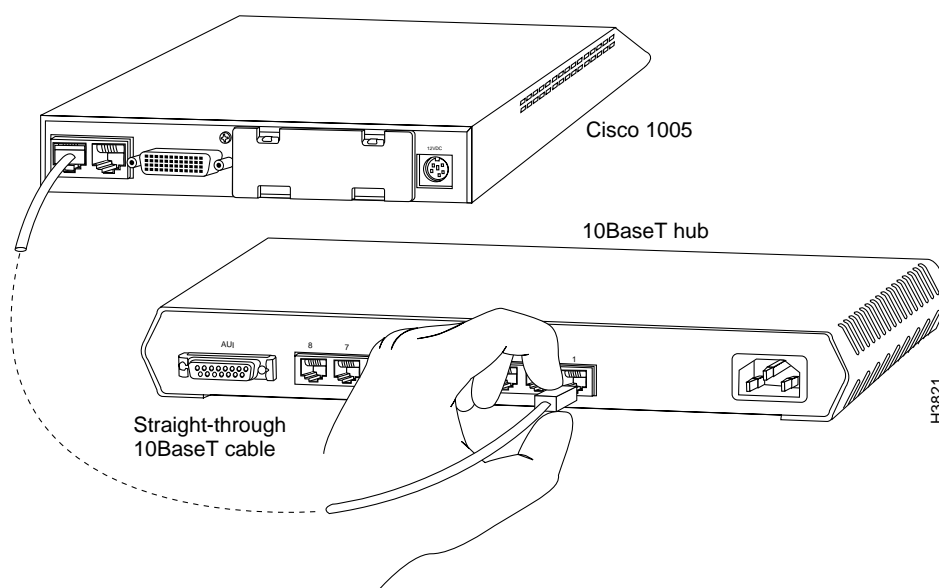


Connecting to the Network and Powering Up the Router

Figure 2-10 Connecting to an Ethernet Network Interface Card

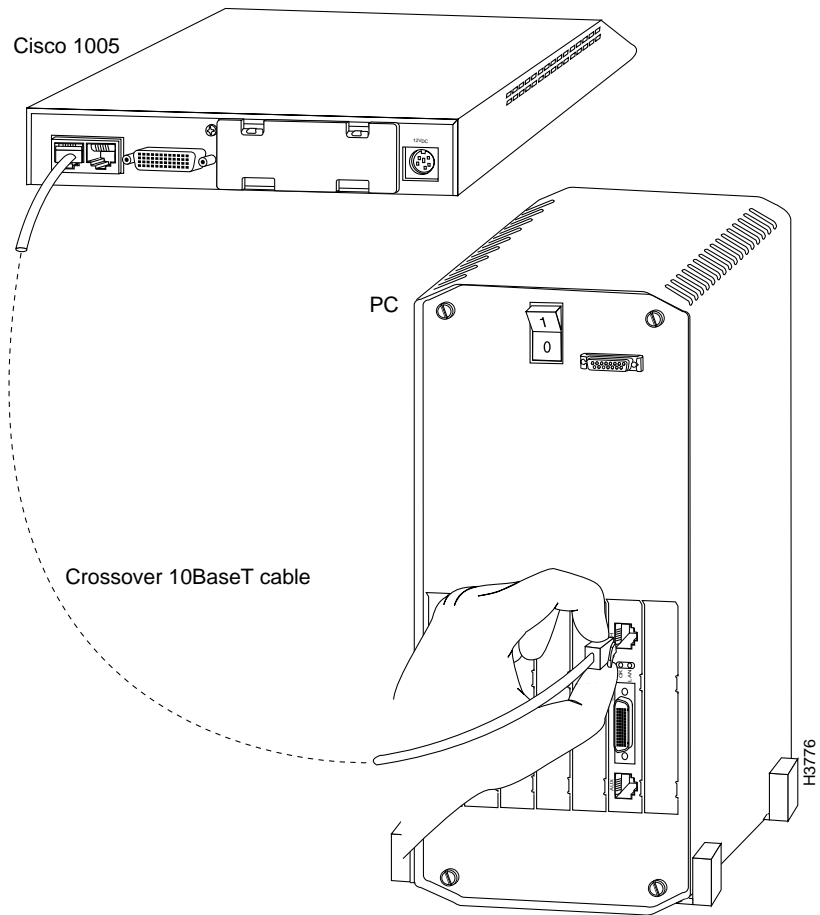

Step 3 Connect a shielded serial transition cable to the serial port. (See Figure 2-11.)


Figure 2-11 Connecting to the Serial Port

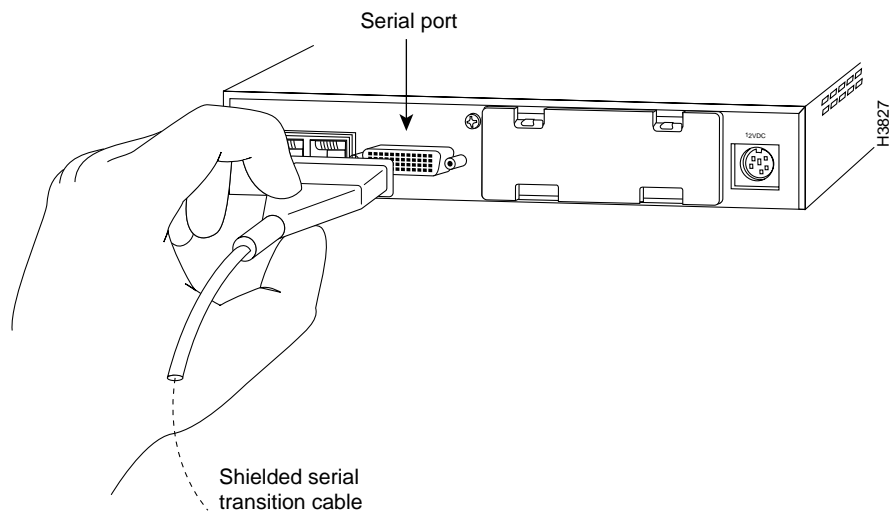

Connecting to the Network and Powering Up the Router

- Step 4** Connect the other end of the shielded serial transition cable to a CSU/DSU or modem (synchronous or asynchronous). (See Figure 2-12.) The serial port operates in data terminal equipment (DTE) mode only. You cannot connect the cable to another DTE device (such as a router).

Figure 2-12 Connecting to a CSU/DSU or Modem

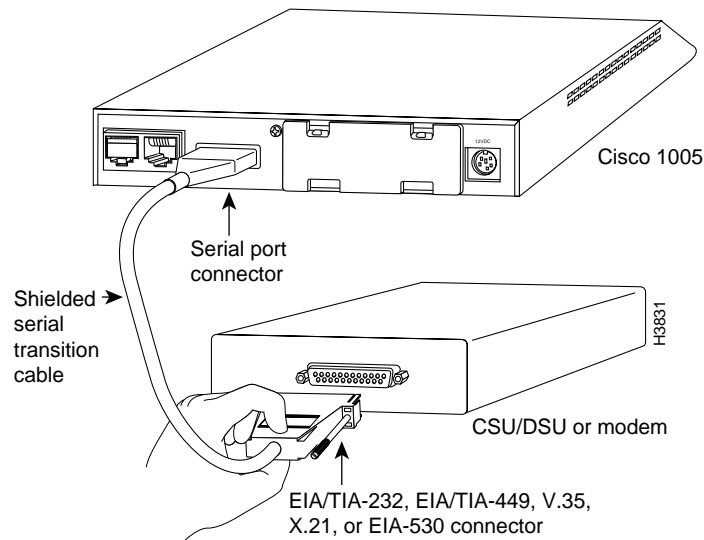


Connecting the Console

If your router is not already configured, use the console cable in the console cable kit provided with your router to connect a console (an ASCII terminal or PC running terminal emulation software that supports EIA/TIA-232). The console cable kit contains an RJ-45-to-RJ-45 rollover cable and a RJ-45-to-DB-25 adapter.

To connect a console, follow these steps:

- Step 1** Connect the supplied roll-over console cable (RJ-45 to RJ-45) to the console port on the router. (See Figure 2-13.)

Figure 2-13 Connecting to the Console Port

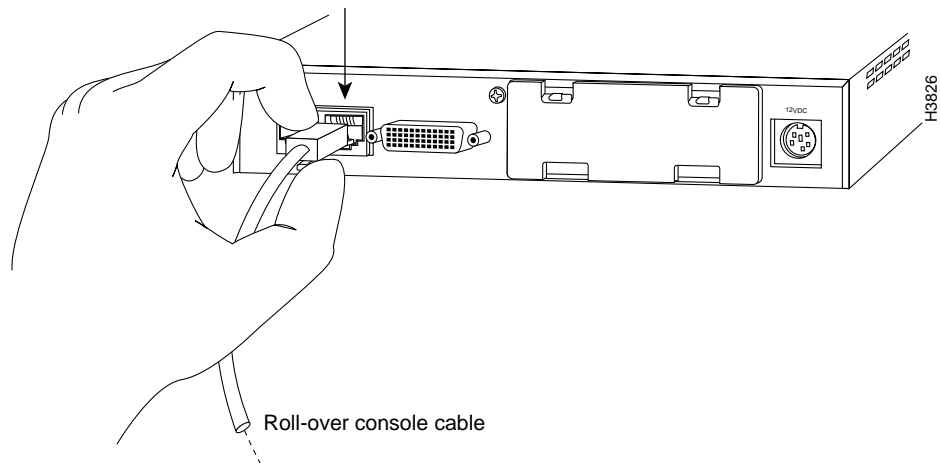

- Step 2** Connect the other end of the console cable to an ASCII terminal or PC. The ASCII terminal or PC port might require an RJ-45-to-DB-25 adapter. An RJ-45-to-DB-25 adapter, labeled “Terminal,” is provided with the router. Other types of adapters are not included.
- Step 3** Set your terminal or PC terminal emulation software to 9600 baud, 8 data bits, no parity, and 2 stop bits.

Connecting the Power Supply


To connect the power supply, perform the following steps:

Step 1 Connect the DC power cable from the power supply to the DC power input on the rear panel of the router. (See Figure 2-14.)




Warning This equipment has been designed for connection to TN and IT power systems. (To see translated versions of this warning, see the appendix “Translated Safety Warnings.”)

Figure 2-14 Connecting to the DC Power Input

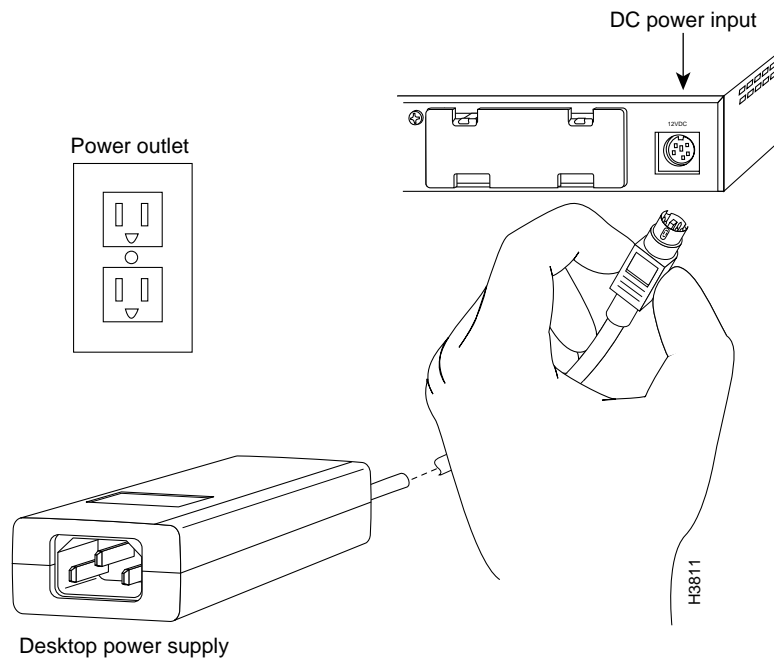

Step 2 Connect the female end of the power cable to the male receptacle on the power supply. (See Figure 2-15.)

Figure 2-15 Connecting to the Power Supply

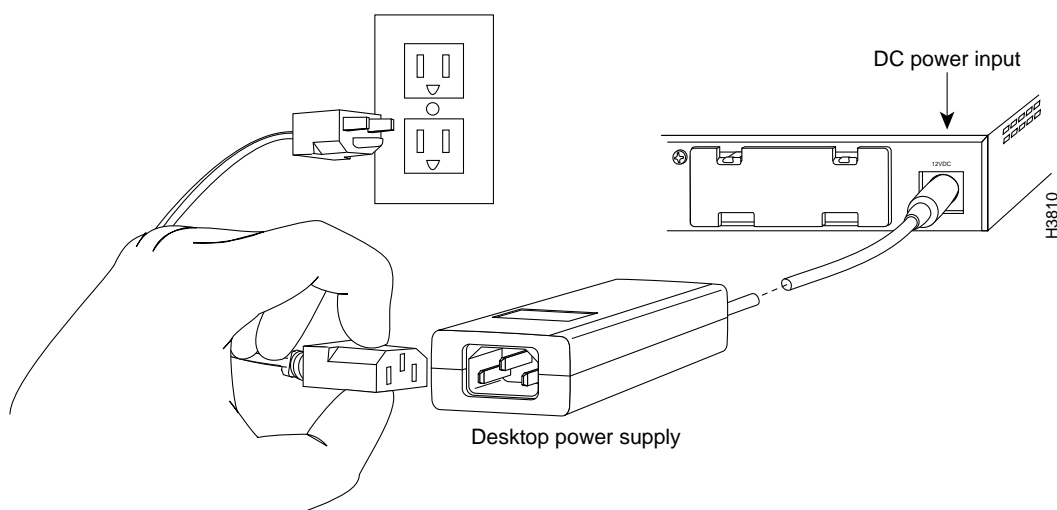


Note The router is shipped with an AC power cable that has the appropriate plug for the country in which the router will be installed.

Connecting to the Network and Powering Up the Router

Step 3 Connect the male end of the power cable to the power outlet. Plugging in the power supply turns ON power to the router. (See Figure 2-16.)

Figure 2-16 Connecting to the Power Outlet

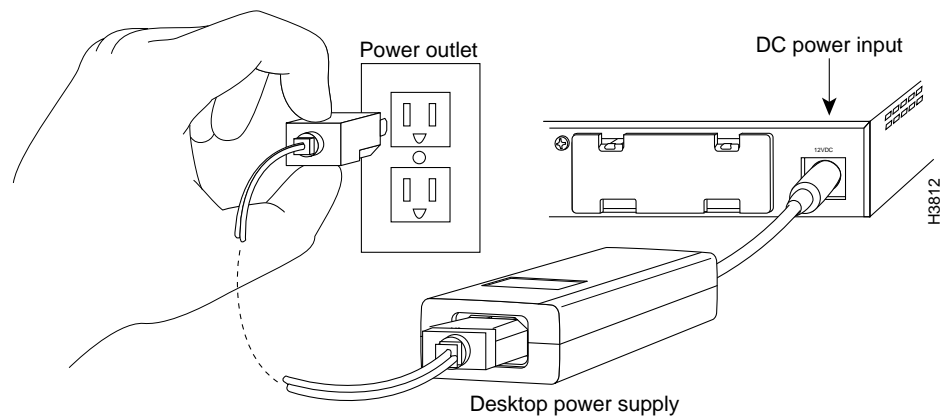

Warning Unplug the power cord before you work on a system that does not have an on/off switch. (To see translated versions of this warning, see the appendix “Translated Safety Warnings.”)

Checking Your Router Installation

After you finish installing your router, attempt to transfer data and check the LEDs on the front panel to make sure everything is working properly. (See Figure 4-1 in the chapter “Troubleshooting the Cisco 1005.”)

- Step 1** Make sure that the LED labeled POWER is on steadily, and that the LED labeled SYSTEM OK is on when the router is plugged into the power source. The system OK LED blinks during startup and then remains on steadily while the router is operating. When these LEDs are on, it indicates that the router is receiving power and that it has passed internal diagnostic tests.
- Step 2** Make sure that the LEDs labeled LAN TX (Ethernet transmit) and LAN RX (Ethernet receive) are flickering, and that the link OK LED is on. When the LAN TX and LAN RX LEDs flicker, there is Ethernet traffic on your LAN. When the LAN is very busy, the LED might appear to be on instead of flickering. If the LED is off, there may be a problem with the unit, or there may be no traffic on the LAN. When the link LED is on, the router is sensing the Ethernet link signal on the network. If the link LED is off, the router is not sensing the Ethernet link signal on the network, and the LAN TX and LAN RX LEDs will be off as well.
- Step 3** Make sure that the LEDs labeled SERIAL TX and SERIAL RX are flickering. The flickering indicates that there is WAN traffic on the serial port. The LEDs might flicker at intervals of up to 10 seconds, or not at all, depending on the router configuration and flow of data packets through the router.

If you do not see the correct LED indications, refer to the chapter “Troubleshooting the Cisco 1005” for more information about the LEDs.

Checking Your Router Installation
